

MB IR PLUS

Contents

A. Install USB driver

B. Test Frequency

C. Key Analyser

 
D. Key Renew

E. Program Key

F. How to get key dump

G. About 705E6 key (big key)

A. install USB driver



Step 1: install USB driver

Step 2: run “CDM20802_setup.exe”

B. Test Frequency

Put the remote key on MB IR PLUS , and press the remote key lock or unlock button, MB IR PLUS will display radio Frequency on the display,



And if the display not shown 315 or 433,


Fault Finding:-


1. May be the battery is flat, check the battery and test it again.
2. If battery is ok, the Key will have problem.

C. Key Analyse

Insert key to MB IR PLUS , and insert usb cable to computer , run “MB IR plus.exe” , you can get key information.





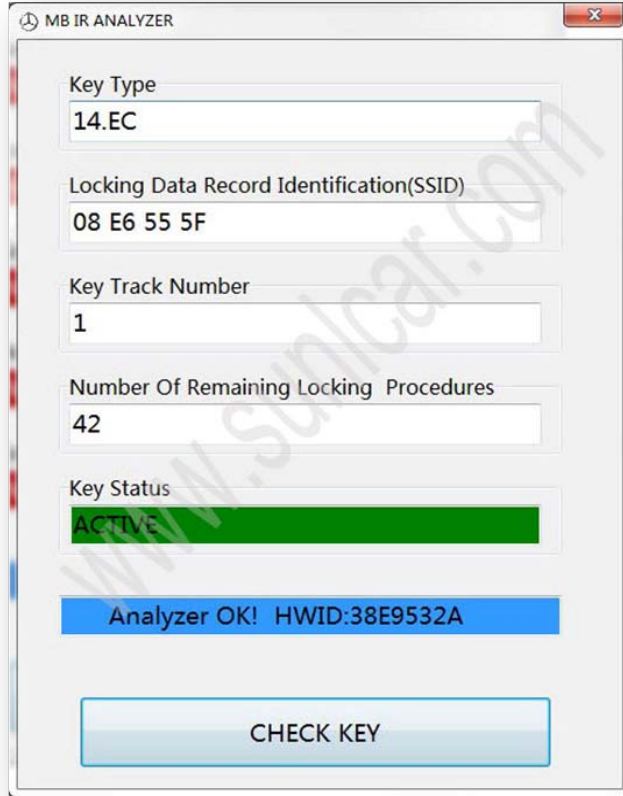

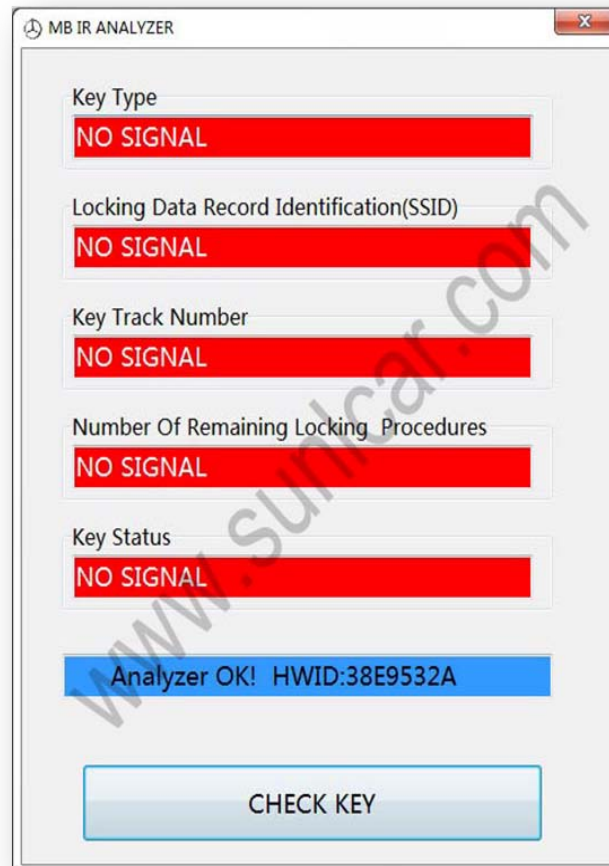

No signal -> check key coil, IR led, or quartz.

D. Key Renew

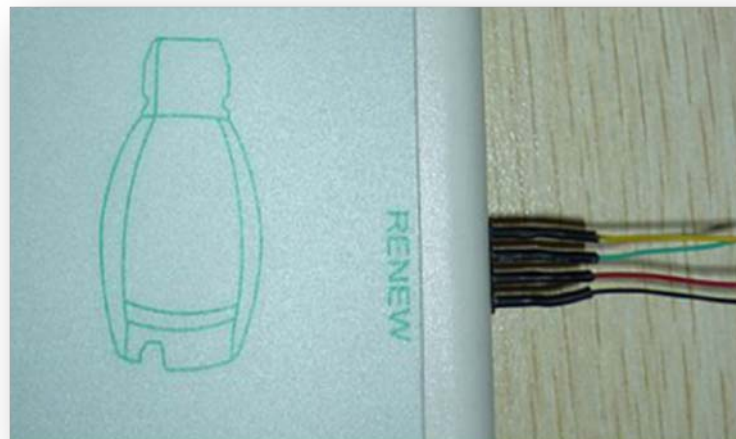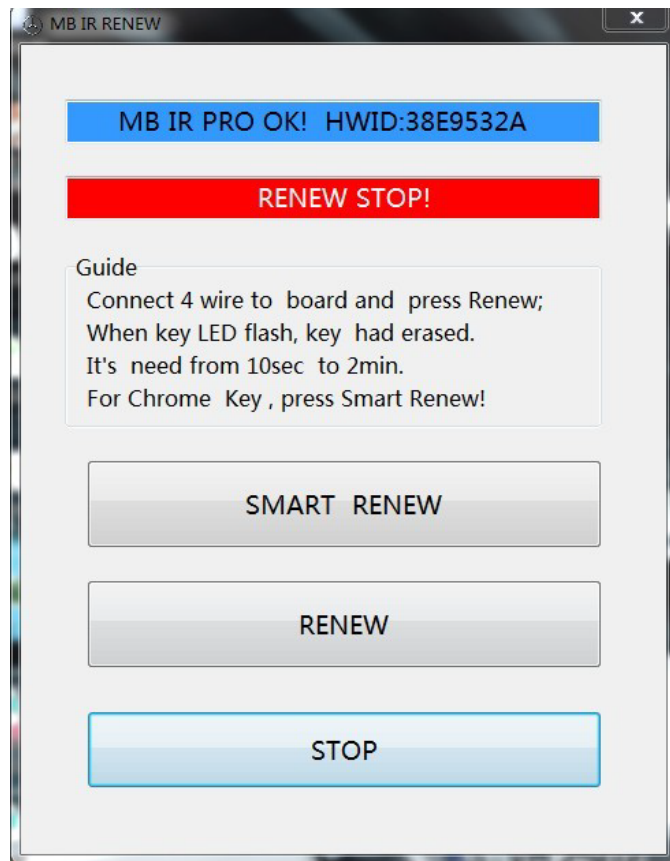

[RENEW KEY new.pdf](#)

E. program Key

Before programming the key (NEC MCU key) , must be erase NEC MCU , and check weather is blank.

[Program key](#)

F. How to get key dump

A: You can use dump.exe software to calculate key dump form EIS, ECU, ESL & ESM.

B: Key calculate software, can calculate key dump for EIS only. (You can buy the Key calculate software or buy the key dump from us)

C: About NEC EIS is not support for MB IR PLUS

G. About 705E6 key (big key)

Old big key MCU is 705E6, You can read and write it with programmer. (ex: ETL ,X-Prog M, or UPA).

MB IR PLUS no support program 705E6 key!