


BMW OPS/GT1 DIS operation Manuel

First step:

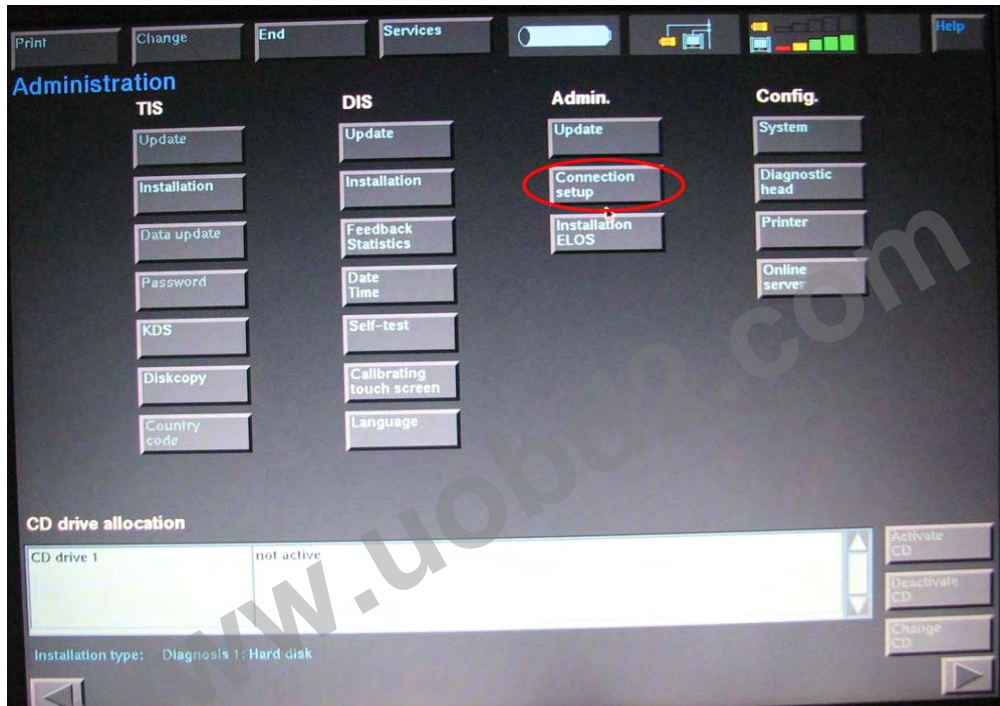

Second step:




Third step:



Fourth step:



Fifth step:

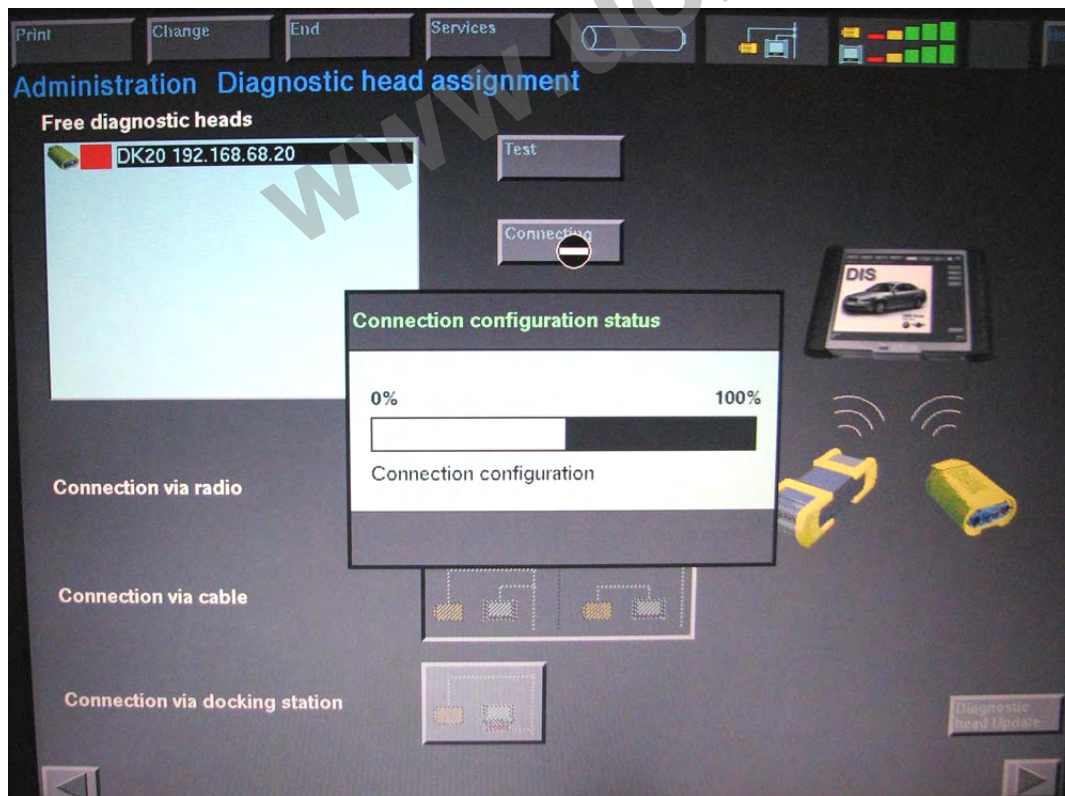

Sixth step:

