

## SUPER iCOM Updater User Manual

### Notice:

- *The SUPER iCOM Updater is special tool for **authorized SUPER ICOM user**, and this tool is for upgrade only. We do not pay any responsibility if you update other software.*
- *The SUPER iCOM **Updater must run inside SUPER iCOM system**, please do not run in your own local system.*

The entire authorized users are able to find the **serial number** [SUPER2015XXX] in your mobile HDD, and **password** [xxxx-xxxx-xxxx-xxxx] in the password envelope which come with the SUPER ICOM tools.

**Upgrade ID: Your serial number**

**Upgrade password: Last 8 digital numbers inside your Password envelope**

### How to update my system:

1. *Double click the Super ICOM Updater icon on the desktop*
2. *Input the Serial number and password*
3. *choose the version you want to upgrade*
4. *wait for the download process finish*
5. *Install the update files.*

### Other Details:

*How to find my password if I lost the Password envelope?*

**You can click the forget password and input necessary, we will verify your info and send to your email with new password.**

*How to renew my account if it is expired?*

**You can click renew button and input the new code which you could purchase from our local dealer.**