

STATEMENT

(1) This manual is designed for the PS701 product, any company or individual are not permit to replicate and backup it in any form if they don't have the authority license from XTOOLTECH CO., LTD (include electronic, mechanical, photocopying, recording or others).

(2) PS701 is just offered for the professional and technical personnel of vehicle maintenance

(3) This manual only provides methods of operating PS701 products, our company does not undertake any responsibility if it result in any consequences by operating other equipments.

(4) XTOOLTECH does not undertake any responsibility if the equipment is damaged or let users cost or loss any expenditure because of the user's personal or third-party's accident; or abuse or misuse of the equipment; or unauthorized alteration and repair; or wrong operating not guide by manual, etc.

(5) The manual is based on the existing configuration and functions, and it will also be subject to change if the tool is added new configuration and new features, but please pay attention that we wont notice it specially.

(6) XTOOLTECH Company has conducted a registration of

trademarks, the logo is



(7) XTOOLTECH Company claim that it still owns the ownership of

trademarks, service marks, domain names, logos and company names among the nationals where those have not yet be registered . The other products and other company names mentioned by the manual still belong to the original registered companies. nobody can use the name of XTOOLTECH or the trademarks, service marks, domain names, logos and company names if without the formal agreement written by the consent of the XTOOLTECH owner,

(8) You can access the web site: <http://www.xtooltech.net> to learn more about the related information of PS701 equipment.

(9) XTOOLTECH company owns the final interpretation of the manual contents.

Notes

- (1) Vehicle power supply must meet the normal operating voltage, such as the 10V-12V.
- (2) Holding the bulk of the wire to plug in and out when doing the plug in and out test, it's not allowed to hold from the middle of the wire to plug in and out. Checking the interface before connect, plug in the wire into the interface in parallel but not sideling.
- (3) If the tested car model or systems could not be found in the testing menu of PS701, it's probably out of the software is not updated or customers can consult the technical service department.
- (4) Non XTOOL wire is not allowed to do the connection test in order to avoid unnecessary damages.
- (5) TF card could not be taken out when testing the car in case that the data will lose.
- (6) It 's not allowed to power off the machine when PS701 is communicating with the car. It's necessary to cancel the ongoing application then go back to the main menu to power off.
- (7) Handle with care when using PS701 in order to avoid hit.
- (8) When long time no use PS701, the power must be cut down and machine should be powered off.

Content

Chapter one	acquaintance of PS701	5
1、	PS701 Appearance and interface diagram	5
2、	Diagnostic diagram	6
3、	Technical parameters	6
Chapter two	setting of products	7
1、	Language Setting	7
2、	Contrast setting	8
3、	LCD test	9
4、	Keyboard test	10
5、	Display information	11
Chapter three	use and common functions of PS701	12
1、	Car diagnostic interface and location description	12
	A. OBD II diagnostic interface	12
	B. The old car NISSAN 14PIN	12
	C. The old car HONDA 3PIN	12
2、	Diagnose of OBD II agreement	13
3、	Test by vehicle models	26
	A. TOYOTA test	26
	B. HONDA test	32

C. NISSAN test	37
D. MITSUBISHI test.....	43
E. MAZDA test	49
F. SUBARU test.....	50
G. SUZUKI test.....	51

 
Chapter one acquaintance of product

1. PS701 Appearance and interface diagram


The product outer appearance must take the real object as a standard.



PS701 The interface at the top:

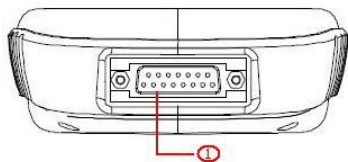

PS701 The interface at the below:

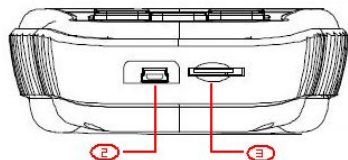 

PS701 Interface Description:

- ① : Main test line interface
- ② : USB interface
- ③ : TF card slot

2. Diagnostic diagram




3. Technical parameters

CPU:	ARM 32 CPU	72MHz
RAM:	64K Ram	
Program Memory:	512K Flash	
External memory:	TF card	
Mainframe power supply:	DC12V	
Mainframe power:	8W	
Display Screen:	160mm × 160 mm	
Components of the whole set:	mainframe, test connector, wires, manual and packing carton etc	
Ambient temperature:	-20—50℃	
Relative Humidity:	<90%	
Dimensions:	225mm * 98mm *36mm	

Chapter two setting of PS701

1. Language Setting

 At the main screen menu, select **【Language】** to set languages.

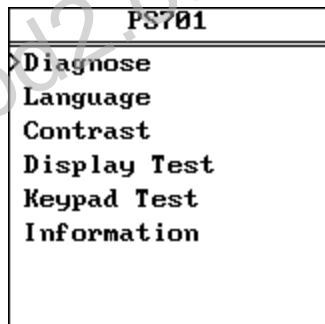

After enter into the language settings menu, up and down key can be used to select the desired language, meanwhile, the left and right key can be used to turn the page.

 


After selecting the desired language press **【ENTER】** to confirm the language..




2. Contrast setting

At the main screen menu, select **【Contrast】** to set the contrast.

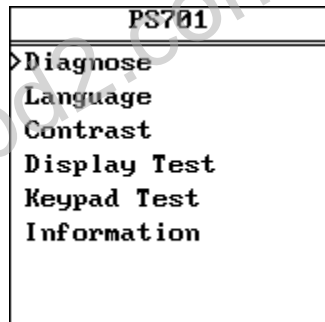


 After entering into the Contrast interface, the left and right key can be used to adjust the screen contrast while the up and down keys can be used to do the fine-tune. Adjust the contrast then press **【ENTER】** to save the settings.

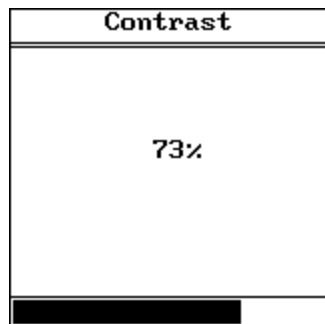


3. LCD test

 At the main screen menu, select
【Display test】 to do the LCD test.

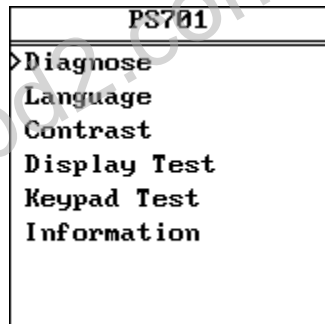


 When selecting the 【Display test】
menu, press 【ENTER】 to do the LCD
screen test, then see from the LCD
screen to make sure if there are any
problems with the display screen.


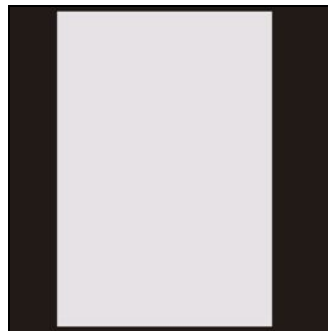


4. Keyboard test

 At the main screen menu, select **【Keyboard test】** to test the keyboard.

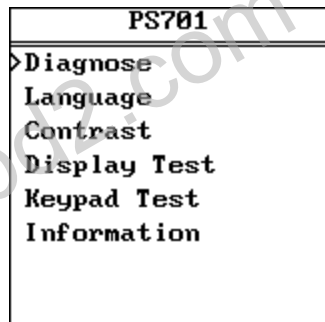


  Keyboard test is to find out whether the keyboard of PS701 has any problems or not. After entering the testing interface, press every key to see if the key is displayed on the screen accordingly. When the pressed key is not displayed on the screen, it indicates that this key has problem.

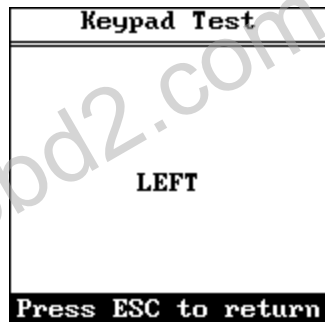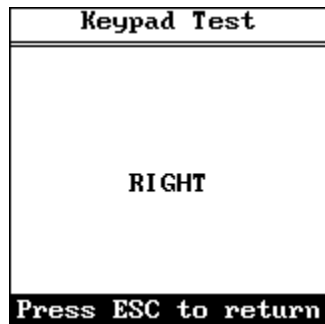


5. Display information

 At the main screen menu, select **【 information 】** to show the relating information of the product.

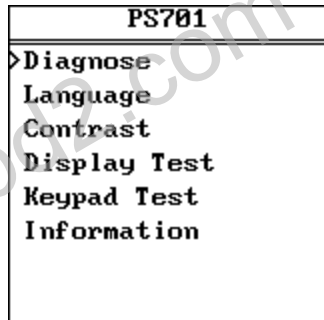

 The information is including the product serial number, hardware version, software version, date and so on.

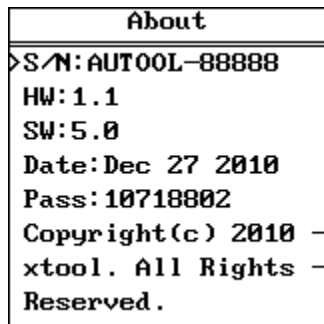

Chapter three the use and common functions of PS701

1. Car diagnostic interface and location description:

A. OBD II diagnostic interface:

Location: (●)

 
It's below the steering wheel and over the clutch pedal.



B. The old car NISSAN 14PIN diagnostic interface:

Location: (●)



It's above the clutch pedal, and in the fuse box which is on the bottom left of the instrument panel.




C. The old car HONDA 3PIN diagnostic interface:

Location: ●

  Below the steering wheel and above the clutch pedal, it's below the passenger side glove box.




(BLUE)

 

2. Diagnose of OBD II agreement

 In the main interface menu, select **【diagnose】** to do the OBD II diagnosis.

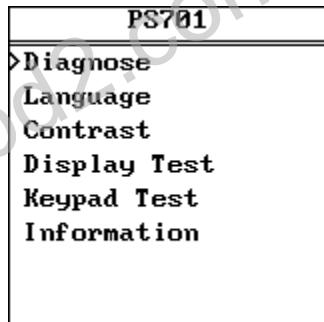


When selecting the OBD II, it can diagnose the vehicle with OBD II agreement.


After selected the OBD II menu it still can not diagnose OBD II vehicles, you should check whether the vehicle is with a standard OBD II protocols, if not , please diagnose the vehicles according to the model of the car.



 
After selecting the menu screen **【OBD II】** will display the software version, press **【 ENTER 】** communication to the vehicle.

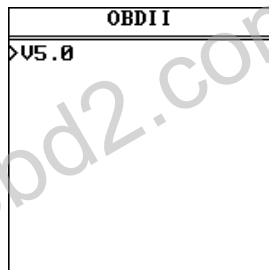

 
At this point, the diagnostic tool will scan the OBD II agreement of the vehicle, displayed as the right picture .

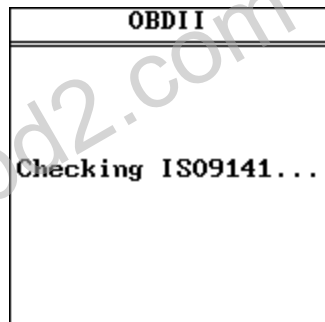

 If the communication is normal, diagnostics menu screen will display, you can select the function according to your needs.

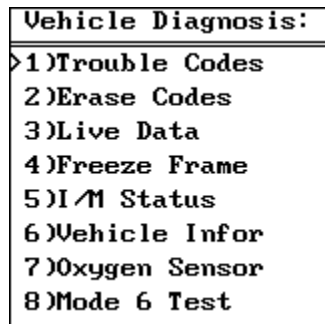

 After selecting reading the fault code, the screen will display the fault code and definitions. If you read a number of fault code, press **【ENTER】** key to scroll down.

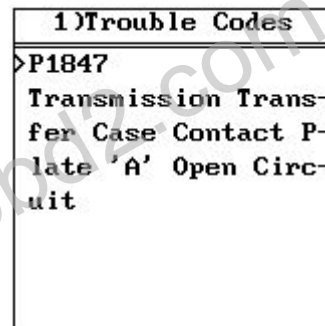

Select Clear to clear the fault code. If the fault codes are still appeared after cleared the fault codes, it indicates that there are fault codes currently not excluded, it should be repaired.

Vehicle Diagnosis:

- 1) Trouble Codes
- 2) Erase Codes
- 3) Live Data
- 4) Freeze Frame
- 5) I/M Status
- 6) Vehicle Infor
- 7) Oxygen Sensor
- 8) Mode 6 Test

After selecting erase the fault codes, the screen will display ‘Do you want to erase all the fault code(s)?’, press **【ENTER】** to clear the fault codes.

2) Erase Codes

 
Do you want to erase all the fault code(s)?

If the fault codes are cleared successfully, the screen will displays “Erase fault codes successfully”


2) Erase Codes

Erase fault code(s) successfully!


Select read data stream function to read OBD II data stream.

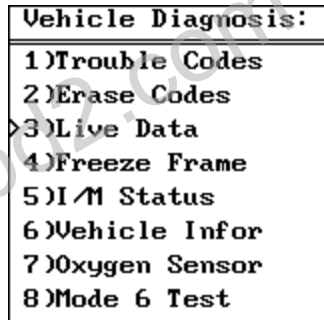

 After read the data stream, the screen will display the data.

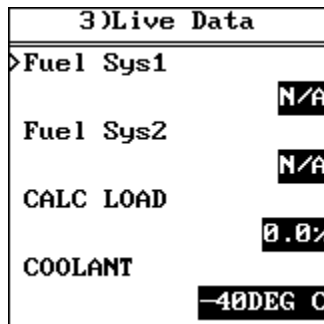

 Through the left and right keys to turn the page to view the data stream, reading data stream is an important function to judge the fault.

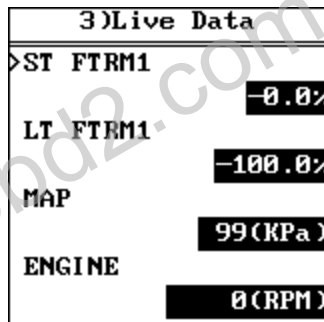

Read freeze frame function can read the freeze frame data relating to the stored fault codes.

Vehicle Diagnosis:
1) Trouble Codes
2) Erase Codes
3) Live Data
> 4) Freeze Frame
5) I/M Status
6) Vehicle Infor
7) Oxygen Sensor
8) Mode 6 Test

After read freeze frame data, the screen will display the read out freeze frame data.

4) Freeze Frame	
> VEH SPEED	0 Km/h
IAT	-39 (DEG C)
MAF	0.00 (g/s)
ABSLT TPS	99.0%

Select I / M Status function can read the switch power and functional status of the OBD II system components.

5) I/M Status	
> MIL Status	OFF
EVAL: MISFIRE	SUPPORTED
EVAL: FUEL SYS	SUPPORT
EVAL: COMPONENT	SUPPORTED

Use the left key and right key to turn over the page.

5 I/M Status	
>SUPP:HEATED CAT	NOT SUPPORTED
SUPP:EVAP.SYS.	SUPPORTED
SUPP:SEC AIR SYS	SUPPORTED
SUPP:A/C REFRIG	NOT SUPPORTED

I/M Status data item comparative table

Abbreviated Name	Expanded Name
Misfire Monitor	Misfire monitor
FUEL System Mon	Fuel System Monitor
Com Component	Comprehensive Components Monitor
Catalyst Mon	Catalyst Monitor
Htd Catalyst	Heated Catalyst Monitor
Evap System Mon	Evaporative System Monitor
Sec Air System	Secondary Air System Monitor
A/C Refrig Mon	Air Conditioning Refrigerant Monitor
OXYGEN Sens Mon	Oxygen Sensor Monitor
Oxygen Sens HTR	Oxygen Heater Sensor Monitor
EGR System Mon	Exhaust Gas Recirculation System Monitor

Select vehicle Information to read the relating information of the vehicles.

Vehicle Diagnosis:	
1)	Trouble Codes
2)	Erase Codes
3)	Live Data
4)	Freeze Frame
5)	I/M Status
>6)	Vehicle Infor
7)	Oxygen Sensor
8)	Mode 6 Test


The vehicle Infor will be displayed on the screen after selecting the vehicle information.

6) Vehicle Infor	
>	VIN: TMBGE21Z0720167
	86
	CALID: 03G906021LD 8
	514


If the vehicle does not support this function, the screen will display 'Not Support!'.

6) Vehicle Infor	
Not Support!	

 
Select Oxygen Sensor to read the data values of the Oxygen Sensor.

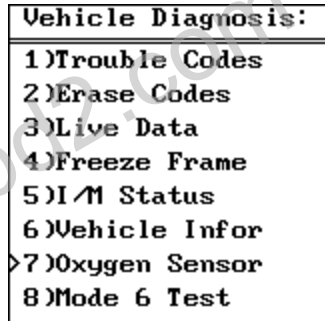

 
After reading the Oxygen Sensor the screen will show the sensor menu of every group of sensors, then select to read according to the needs..

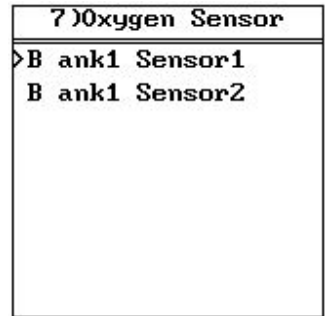

 
If the vehicle does not support this mode, the screen will show 'The selected mode is not supported'.

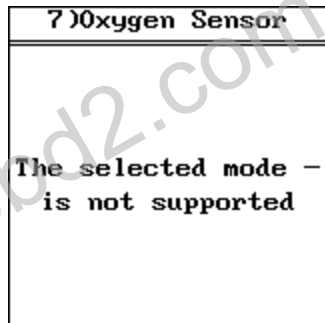

 Oxygen sensor test is not supported for CAN, please select service \$06.

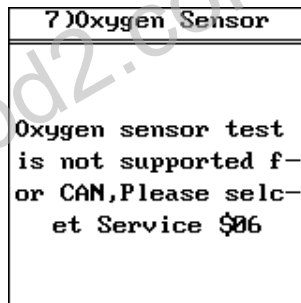

 If the communication is normal, the screen will display the select interface, select to read the maximum value and minimum value according to the needs.

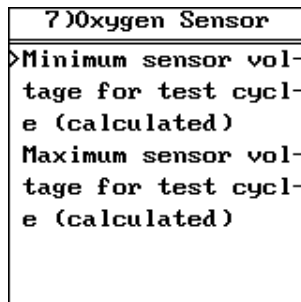

Disp test result.

MinSeVoForTeCy(Cal)
Test VAL :0.3v
Min Limit:0.0v
Max Limit:0.0v

Oxygen sensor data item comparative table

Abbreviated Name	Expanded Name
RichToLeSeThV(Con)	Rich to lean sensor threshold voltage (constant)
LeanToRiSeThV(Con)	Lean to rich sensor threshold voltage (constant)
LowSeVfSwTiCA(Con)	Low sensor voltage for switch time calculation (constant)
HighSeVoFoSwTiCa(Con)	High sensor voltage for switch time calculation (constant)
RichToLeSwTi(Cal)	Rich to lean sensor switch time (calculated)
LeanToRiSeSwTi(Cal)	Lean to rich sensor switch time (calculated)
MinSeVoForTeCy(Cal)	Minimum sensor voltage for test cycle (calculated)
MaxSeVoForTeCy(Cal)	Maximum sensor voltage for test cycle (calculated)
TimeBeSeTr(Cal)	Time between sensor transitions (calculated)
Sensor period(Cal)	Sensor period (calculated)

Select 'Mode 6 Test' on the menu to test a vehicle's catalytic converter conversion results, the diagnosis result of the second air system, evaporation control test etc..

Vehicle Diagnosis:	
1)	Trouble Codes
2)	Erase Codes
3)	Live Data
4)	Freeze Frame
5)	I/M Status
6)	Vehicle Infor
7)	Oxygen Sensor
>8)	Mode 6 Test

As a result of different definitions of car manufacturers on the TID, you must know the manufacturers of the TID values corresponding to the data to determine the definition.

8) Mode 6 Test	
>TID \$01	
TID \$02	

According to your own need to make selection on the menu, for example, press **【ENTER】** key to confirm the test.

8) Mode 6 Test	
>CID \$01	

If the communication is normal, the screen will display the relevant information.

8) Mode 6 Test	
>	TID: \$01
	CID: \$01[Max]
	Value : 5
	Max : 64
	Min : _____
	Result: PASS

If your vehicle supports ISO 15765-4, then the screen will display the following data menu.

8) Mode 6 Test	
>	OBDMID \$01
	OBDMID \$02
	OBDMID \$21
	OBDMID \$a0
	OBDMID \$a1
	OBDMID \$a2
	OBDMID \$a3
	OBDMID \$a4

According to your own need to make selection on the menu, confirm to read the data, please press **【ENTER】** key.

8) Mode 6 Test	
>	TID \$8e
	TID \$91

If the communication is normal, the screen will display the data.

```
8) Mode 6 Test
-----
> OBDMID: $01
  TID: $8e
  Value : 0.0000v
  Min   : 0.0000v
  Max   : 0.0000v
  Result: PASS
```

Select the EVAP menu is able to carry on the test to Evaporative System.

```
Vehicle Diagnosis:
-----
> 9) EVAP System Test
```

If the vehicle is not supported this function, the screen will show 'The selected mode is not supported'.

```
9) EVAP System Test
-----
The selected mode -
is not supported
```

 
3. Test by vehicle model

A. TOYOTA Test


In the diagnosis menu, select **【TOYOTA】** menu can do diagnosis on the TOYOTA models.




After the confirmation, screen will show the CANBUS configuration menu, according to the vehicle's configuration to do menu selection.

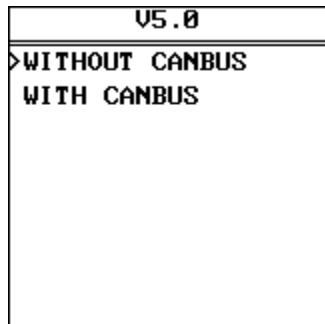

 
To select **【 WITHOUT CANBUS 】** menu as an example, it will show system classify, user can make a selection according to the need.

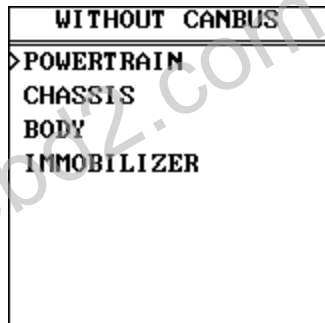

 
To select the ENGINE system, for example, after selection, just need to press **【ENTER】** key.

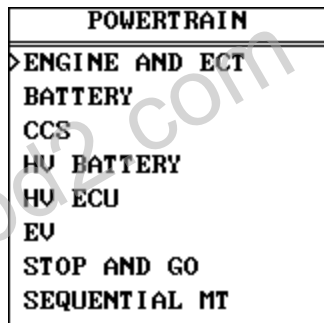

 
If the communication is normal, the screen will display the diagnosis function of the system.

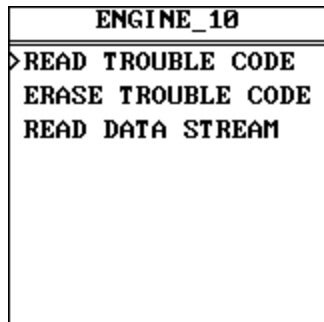

 
After selecting Read fault code, the screen will display the quantity of the fault code, if the system does not have fault code stored, the screen will display the system is normal or no fault code.

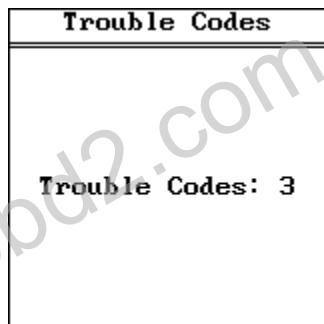

 
Press **【 ENTER 】** key can be individually read fault codes and fault code definition.

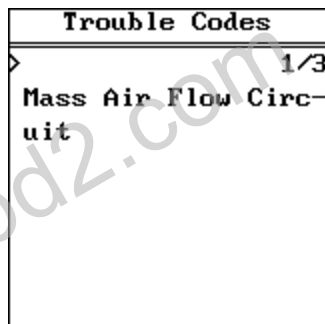

 Then you can do troubleshoot through the content of fault codes.

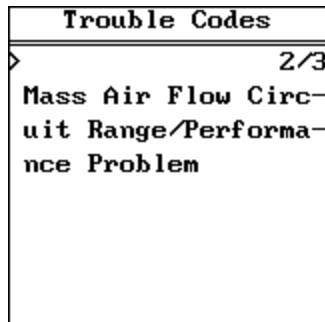

 Select Clear fault codes menu is able to clear the fault codes stored in the system.

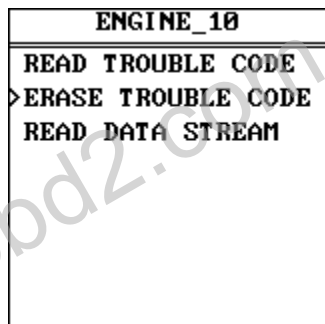

After selecting clear fault codes, screen will display whether confirm to clear trouble code or not, if user want to confirm, please press **【ENTER】** key.

Erase Fault Trouble

Do you want to erase all the Fault Codes?

After pressing **【ENTER】**, the screen will display fault code cleared successfully. Then if we read the trouble code, it still shows fault codes stored, that means there is no solution to those faults currently, the vehicle is needed maintenance.

Erase Fault Trouble


Erase Fault Codes – successfully!

Select Read data stream, real-time data can be read, the function is an important function which determines further diagnosis on the fault.


ENGINE_10

READ TROUBLE CODE
 ERASE TROUBLE CODE
 >READ DATA STREAM

 
After confirmation, the screen will display the menu options of the data stream.

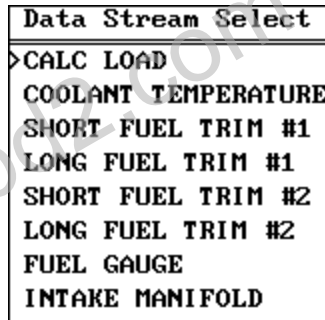

 
Press **【ENTER】** key in the position of need to read the data stream to select to read the data, if before the data items with "*" , that were selected to read. After choosing a data item to read, only need to press **【ESC】** key.

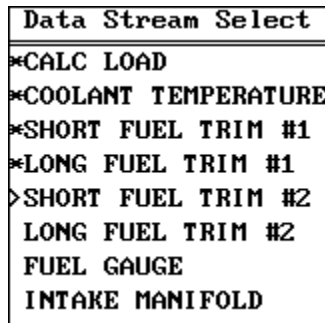

 
If the communication is normal, the screen will display the data stream.

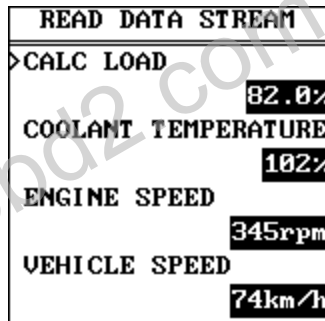

 
By pressing the left, right key can view the data stream through page.

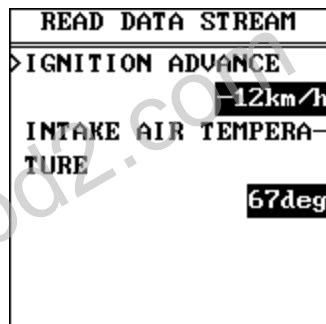

 If the vehicle is equipped with CANBUS protocol, user can select the **【 WITH CANBUS 】** menu in the previous menu for testing.

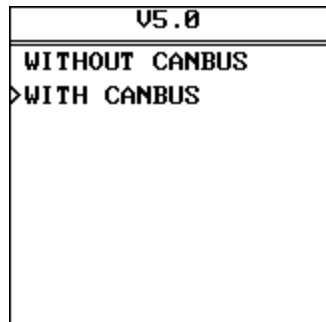

 After confirmation, the screen will display the system menu, you can do menu selection according to your need, methods of operating and diagnostic functions as the same as the **【 WITHOUT CANBUS 】** menu.

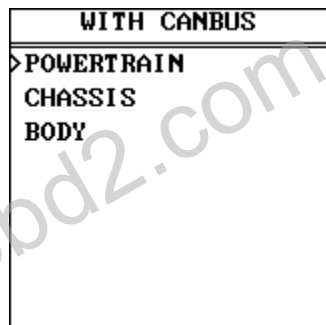


B. HONDA Test


In the diagnosis menu, select **【HONDA】** menu can do diagnosis on the TOYOTA models.



 
After confirmation, the screen will appear with the type of vehicle's diagnostic interface. Then select the menu according to the type of vehicle's diagnostic interface.

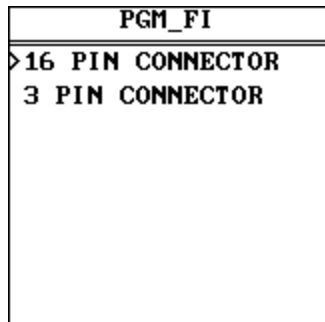

 
To select **【16PIN CONNECTOR】** menu as an example, after confirmation, the screen will display the system menu.

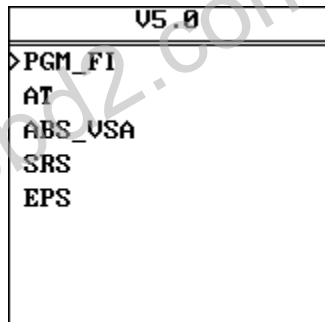

 
To select the **【PGM-FI】** system as an example, After confirmation, the vehicle will be communicated, if it in normal communication, screen will display the ID of the system.

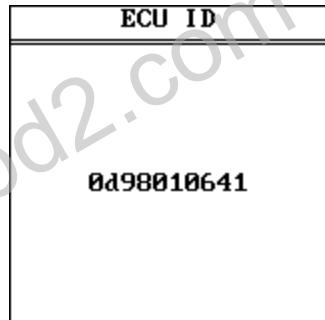

 
Press **【ENTER】** key to display the diagnostic function menu of the system.

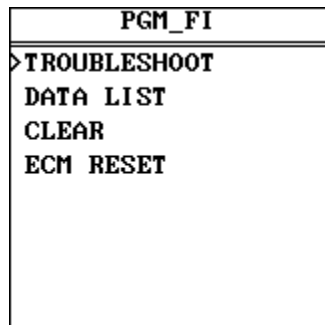

 
Select the function of read fault codes, the screen will display the quantity of fault codes.

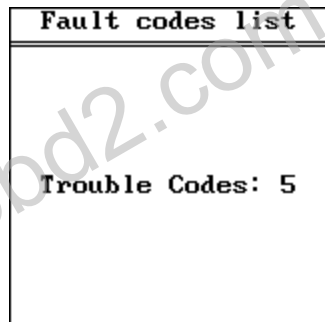

 
Press **【 ENTER 】** key can be individually read fault codes and fault code definition.

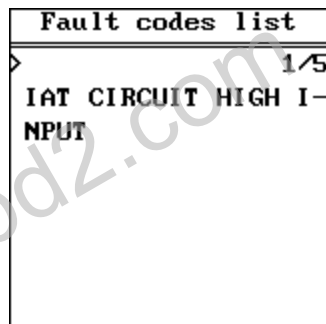

 
Select Clear function to clear the fault code which is stored in the ECU.

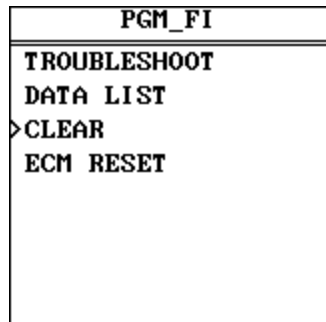

 
After selecting Clear function, screen will display whether confirm to clear trouble code or not

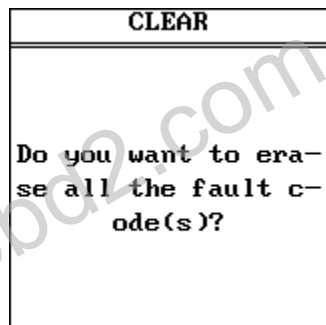

 
If you confirm clearing the fault code, press **【ENTER】** key to clear the fault code which is stored in the ECU.

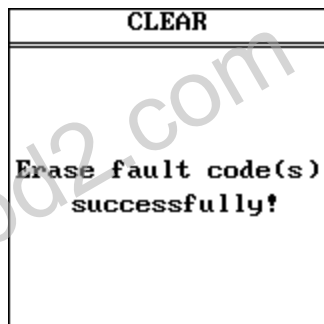

 Select Read data stream, the data stream of the system can be read,

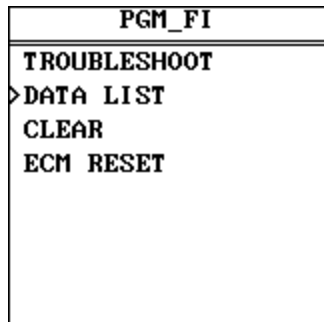

 After confirming to read data stream, if the communication is normal, the screen will display data stream which is read out.

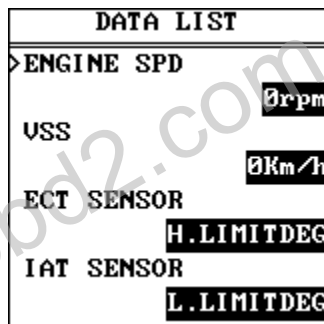

Through the left and right key to view the data stream through page.

DATA LIST	
>MAP SENSOR	176.41Kpa
BARO SENSOR	0.00Kpa
TP SENSOR	75.0DEG
BATTERY	11.29V

To select **【ECM RESET】** function can do reset operation on the ECU.

PGM_FI	
TROUBLESHOOT	
DATA LIST	
CLEAR	
>ECM RESET	

After confirmation, the screen will display "ECM reset" prompt. If you confirm the implement operation of this function, you can press **【ENTER】** key.


ECM RESET	
DTCs and Freeze Data will be lost. Do you wish to continue?	

C. NISSAN Test


In the diagnosis menu, select **【NISSAN】** menu, can do diagnosis on the NISSAN models.



 
Enter the menu will display in the AUTO and MANUAL diagnostic methods.

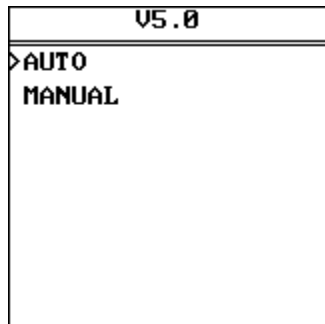

 
To select **【AUTO】** menu as an example, after confirmation, it will scan the system of the vehicle.

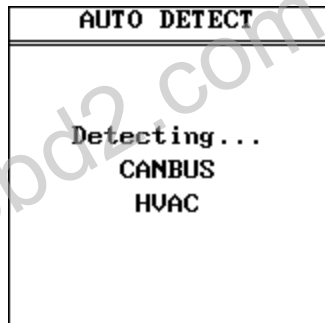

 
Take a little while during the system scanning, please be patient.

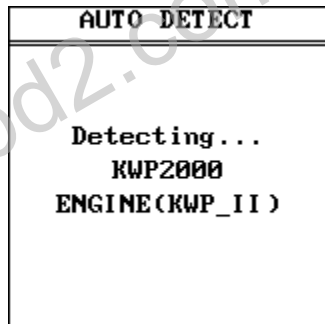

 After the scanning, user is allowed to select the desired system to test, take ENGINE system as an example, after confirmation can do test on the system.

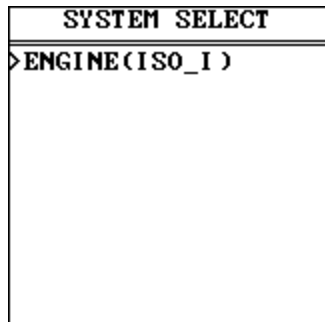

 Select WORK SUPPORT function the can do operation of special function on ENGING system.

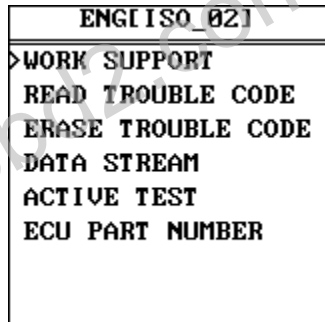

After confirming the WORK SUPPORT function, the screen will display the operating tips of this function.

FUEL PRESSURE RELEA

FUEL PUMP WILL STOP BY TOUCHING [OK] IN IDLING. CRANK A FEW TIMES AFTER ENGINE STALL.

Select the function of read fault codes can read out the fault code which is stored in the system.

ENGI ISO_021

 
WORK SUPPORT
 > READ TROUBLE CODE
 ERASE TROUBLE CODE
 DATA STREAM
 ACTIVE TEST
 ECU PART NUMBER

If the communication is normal, the screen will display the quantity of the fault codes.


READ TROUBLE CODE

Trouble Codes: 2


Press **【ENTER】** key to display the fault code and fault code definition.

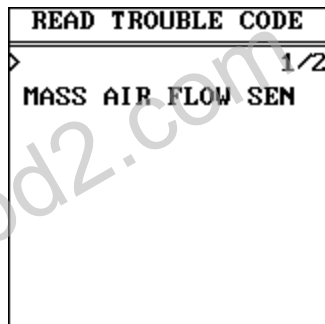

 Select Clear function to clear the fault codes stored in the ECU.

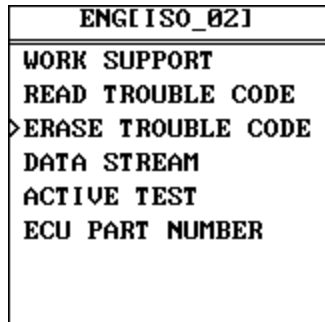

 After confirmation, the screen will display tips of removing fault code.

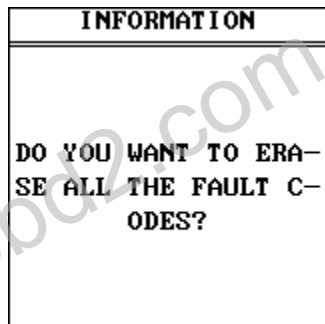

Press **【ENTER】** to clear the fault code.

ERASE TROUBLE CODE

**ERASE FAULT CODES –
SUCCESSFULLY !**

Select the read data stream function can read the system data flow.

ENGI ISO_021

**WORK SUPPORT
READ TROUBLE CODE
ERASE TROUBLE CODE
▷ DATA STREAM
ACTIVE TEST
ECU PART NUMBER**

After confirmation, the screen will display the data stream classification.

DATA STREAM

**▷ ECU INPUT SIGNALS
MAIN SIGNALS
SELECT FROM MENU**

After selecting the appropriate classification, the data stream will be displayed on the screen.

ENGINE DATA LIST	
>CKPS RPM (POS)	0.5rpm
CKPS RPM (REF)	0.5rpm
MAS AIR/FL SEN	5.10V
COOLANT TEMP/S	192.0degC

Through the left and right key to read the data stream through page.

ENGINE DATA LIST	
>O2 SENSOR	0.00V
VHCL SPEED SEN	0.0Km/h
BATTERY VOLTAGE	11.20V
THROTTLE POSI SEN	5.10V

Select ACTIVE TEST function can do implementing test on the system components.


ACTIVE TEST	
>ENG COOLANT TEMP	
FUEL INJECTION	
IGNITION TIMING	
IACV-ACC/V OPENNING	
FUEL PUMP RELAY	

D. MITSUBISHI Test


In the diagnosis menu, select **【 MITSUBISHI 】** menu can do diagnosis on the MITSUBISHI models.



 
After confirmation, screen will display CANBUS configuration select menu, according to the vehicle whether equipped with CANBUS configuration to go on the menu selection.

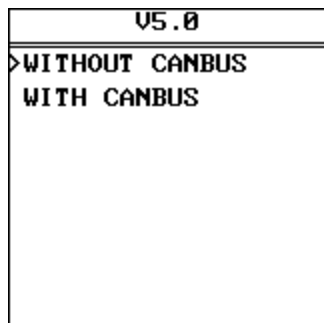

 
Take **【 WITHOUT CANBUS 】** menu as an example, after entering will display the menu of the region where the vehicle belongs to, select the menu according to region.

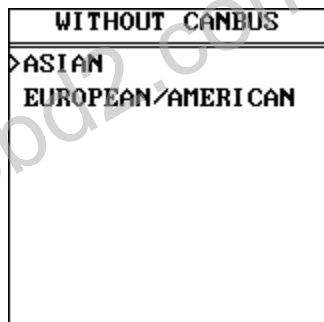

 
After the region menu selection, the system menu will display on the screen, select the System menu according to the need.

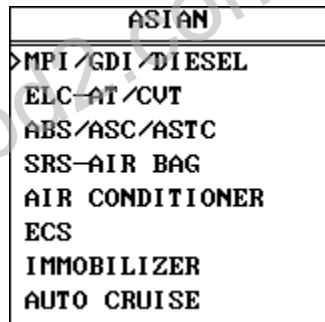

 
To select MPI menu as an example, if the communication is normal, the screen will display the diagnosis function of this system.

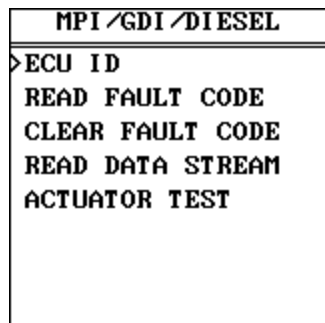

 
Select ECU ID function can read the system's ECU ID.

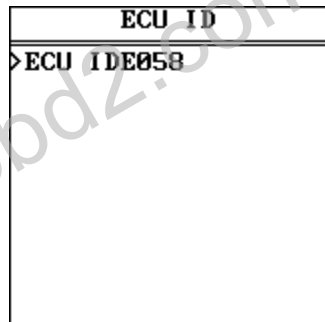

 
Select the function of read fault codes can read out the fault code which is stored in the system. If the communication is normal, the screen will display the quantity of fault codes.

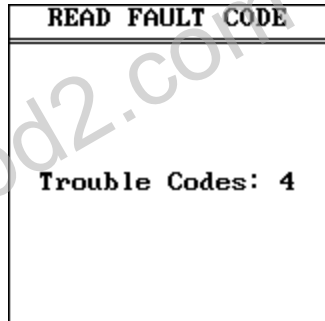

 
Press **【ENTER】** key to display the fault code and fault code definition.

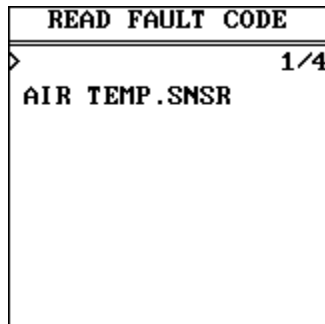

 
Select Clear function to clear the fault codes stored in the system.

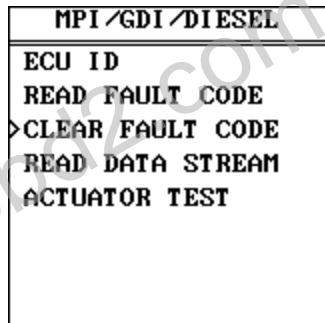

 
After confirmation, the screen will display tips of removing fault code.

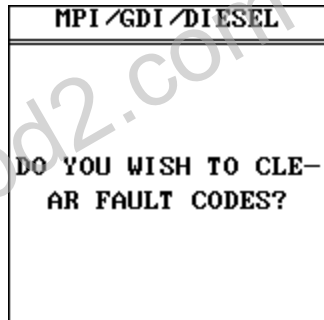

 Press **【ENTER】** key, then the screen will display that the fault code has been cleared.

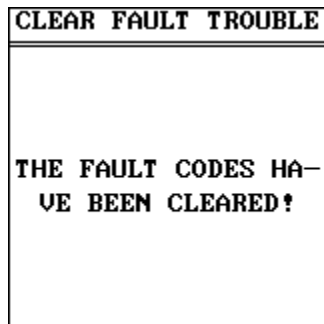

 Select the read data stream function can read the system data flow.

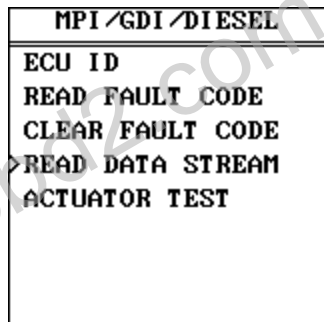

The system's data stream can be read by free choice, in front of each data item you can press **【ENTER】** to select or cancel the reading of the data stream, if before the data item shows "*", the data is selected.

DATA STREAM	
*OXYGEN SNSR	
*AFS	
*AIR TEMP SNSR	
*TPS	
*MPS	
*BATT .VOLTAGE	
>CRANK .SIGNAL	
CLT TEMP SNSR	


After selecting the data items you need to read, press **【ENTER】** to display the data stream in time.

MPI /GDI /DIESEL	
>OXYGEN SNSR	19mV
AFS	0Hz
AIR TEMP SNSR	-57.0degC
TPS	19mV


Through the left and right key can view the data stream through page.

MPI /GDI /DIESEL	
>MPS	4980mV
BATT .VOLTAGE	11.7V
CRANK .SIGNAL	ON

 
Select ACTUATOR TEST function can do implementing test on the system components.

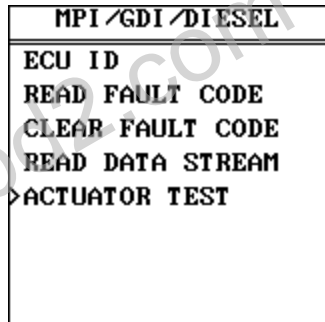

 After confirmation, the screen will display ACTUATOR TEST menu, select according to need.

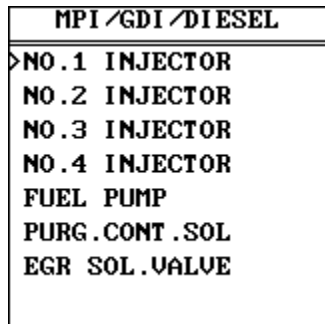

 Before the operation, screen will prompt you to confirm the action. Press **【ENTER】**, it will do test on the selected components.

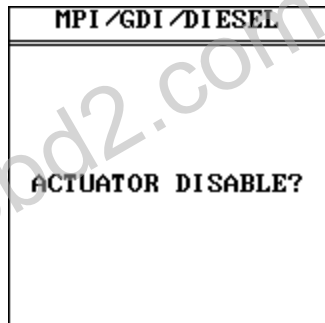


E. MAZDA Test

In the diagnosis menu, select **【MAZDA】** menu can do diagnosis on the MAZDA models. The menu is only for vehicle models which are equipped with OBD II interface.



 After MAZDA menu selection, screen will show the system menu of the model, then select the system menu as need, the diagnostic methods of operation and test functions in the same of other models which have been referred.

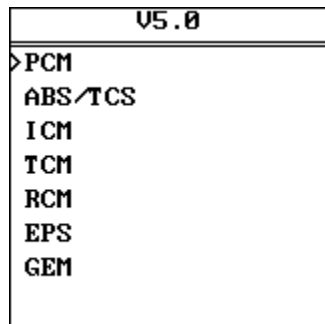

F. SUBARU Test

In the diagnosis menu, select **【SUBARU】** menu can do diagnosis on the SUBARU models. The menu is only for vehicle models which are equipped with OBD II interface.

Select Menu
HONDA
MAZDA
MITSUBISHI
NISSAN
> SUBARU
SUZUKI
TOYOTA
OBD I

After SUBARU menu selection, screen will show the system menu of the model, then select the system menu as need, the diagnostic methods of operation and test functions in the same of other models which have been referred.

V5.0
> Engine System
Transmission System
Cruise System
Brake System
Integ. unit mode

G. SUZUKI test

In the diagnosis menu, select **【SUZUKI】** menu can do diagnosis on the SUZUKI models. The menu is only for vehicle models which are equipped with OBD II interface,.



After SUZUKI menu selection, screen will show the system menu of the model, then select the system menu as need, the diagnostic methods of operation and test functions in the same of other models which have been referred.

