

## Software update

### 1. Setup Update tools


Download form our website:

<http://www.szcreator.com/download.html>

or use the CD

Double click the [Setup file] to setup the tool.

Operate follow the instructions , and finish to setup.

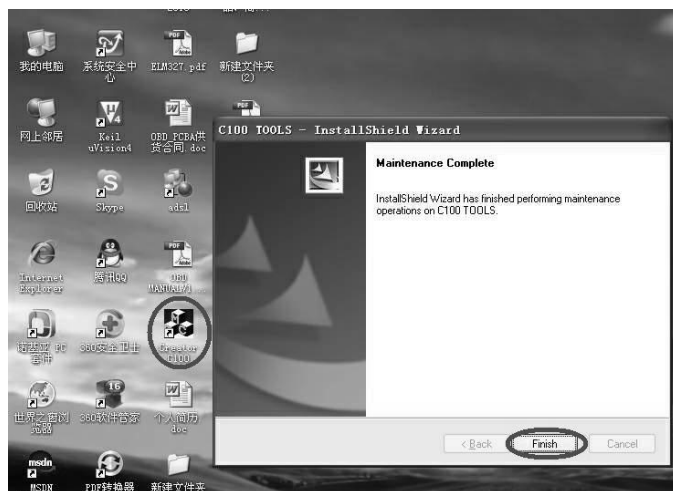

Setup the software in your computer.

After finish setup , there is a icon of scanner in desktop.

## 2. download the software

Download form our website:

<http://www.szcreator.com/download.html>

C100 software	
Name	Language
<a href="#">C100_V3.7_EN+ES</a>	English & Spanish
<a href="#">C100_V3.7_EN+DE</a>	English & German
<a href="#">C100_V3.7_EN+HK</a>	English & Traditional Chinese
<a href="#">C100_V3.7_EN+VN</a>	English & Vietnamese

C110 software	
Name	Language
<a href="#">C110_V3.7_EN</a>	English
<a href="#">C110_V3.7_DE</a>	German

**Note: C100 and C110 software is only fix SN is C1XX 002000 02 or later**

C300 software	
Name	Language
<a href="#">C300_V4.1</a>	English, Spanish, German, Vietnamese, Traditional Chinese, Simplified Chinese

C310 software	
Name	Language
<a href="#">C310_V4.4_EN</a>	English
<a href="#">C310_V4.4_HK</a>	Traditional Chinese
<a href="#">C310_V4.4_DE</a>	German

you can find the software what you want.

## 3. Run the update tool

Double click the update tool icon and Run the update tool and Operate in accordance with photographs



- 1) Used the USB cable connected to scanner and PC, if connect success, the software on pc will shown as below



1) Click [Update] button.



2) Click red rang , you can change the path , and find the updatefile which recive.



- 3) Select update file and click [open] button.
- 4) Into the upgrade interface, wait for the end of upgrade

**WARNING:**

**Do not power off during upgrade!**

**Do not Plug or Unplug USB tools during upgrade!**

#### 4. Start Update

Waiting for a few minutes. The software will update the scanner tool.



#### Finish Update

When the update is finished , the screen on PC will show as below.



**If update success, the software wil display [Update success!]; if update not success, it will display [Update fail! Try again].**

**Press [finish] , the scanner is already updated ,and you can unplug the scanner from PC.**